

How to Change Toner in a Sharp Copier

If your copier is showing a message to replace a toner cartridge, this guide will help you walk through the steps.



Some of our copiers will only allow you to change the toner cartridge once it has been fully depleted. On these copiers, the copier will eject the cartridge that needs to be replaced.

How to Change the Toner Cartridge

1. Locate a spare toner replacement cartridge. If you do not have a spare toner cartridge, [submit a support ticket](#) and we will bring some over. If you need help with how to enter a support request, please use this [guide](#).
2. Open the front cover of your machine. Please use the following images for reference in locating the cover that needs to be open. If you do not recognize your copier on the list, refer to the Sharp badge on the front of the copier, locate the model number, and match it to the correct image.



MX-C301W/MX-C304W
M3070/MX-M5070



MX-B455W



MX-C312/MX-C402SC

MX-3070V/MX-3071/MX-



MX-5070V



MX-M654N/MX-M754N

3. Once the front cover has been opened, pull the empty cartridge out of the copier.
4. Open the new cartridge and shake. Some models will have a green tab on the end, remove the tab and insert the cartridge into the copier.
5. Close the front cover.
6. Place old cartridge into the empty box and mark it as used.
7. Put in a [support ticket](#) for copier services to come by and pick it up for recycling. If you need additional spare toners, please note in the ticket and they will be delivered when the empty cartridge is picked up for recycling.

Related Articles

- [Print and Copy](#)
- [How to Print on Specialized Paper with a Sharp Copier?](#)
- [How to Order Supplies or Request Service for a Sharp Copier](#)

[Search Knowledge Base](#)

[Submit a Service Request](#)

We value your feedback! Click [HERE](#) to suggest updates to an existing article, request a new article, or submit an idea.